DEGEN

# DE303

**AM / FM STEREO HI-FI RECEIVER**

## OPERATING INSTRUCTIONS



## LOCATION OF CONTROLS

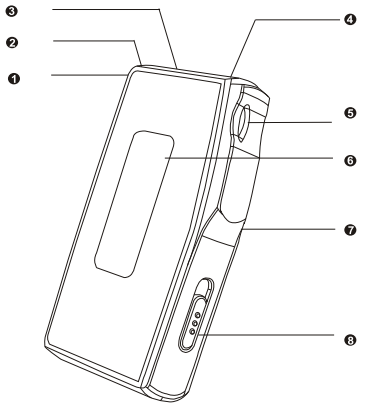


❶ EARPHONES JACK (LEFT SIDE)
❷ CARRYING STRAP
❸ ON / OFF
❹ VOLUME
❺ TUNING KNOB
❻ AM / FM DIAL
❼ CLIP(BACK)
❽ AM \ MONO \S TEREO (FM)

## BATTERY OPERATION

1、 Slip the battery lid in the direction of the arrow.

2、 Insert one AAA battery according the polarity marked as inside the compartment.

3、 Snap down the lid of the compartment.

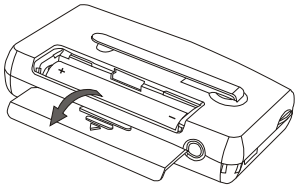

### BATTERY REPLACEMENT

When the battery becomes weak, the sound becomes weak and distorted. Please replace the battery with new one.

- When the unit is not being used for a long period of time, remove the battery to avoid damage form battery leakage and corrosion
- If battery leakage occurs, wipe the battery compartment with a soft cloth before inserting the new ones.



## OPERATING THE RADIO

1、 Connect the small plug of the earphones with EARPHONE JACK❶ .

2、 Set the ON / OFF switch ❸ to ON to turn on the unit.

3、 Set the AM \ FM MONO \S TEREO switch ❽ to AM for AM reception, MONO for FM monaural reception, STEREO for FM stereo reception.

4、 Turn TUNE ❺ to tune in the desire station.

5、 Adjust volume using VOLUME ❹ .

6、 After listening, set the ON / OFF switch to OFF.

- When listening to stereo reception, normally set AM \ FM MONO \S TEREO to STEREO. If the stereo reception too weak and noisy, set the selector to MONO.
- To improve radio reception, extend the earphones cord which functions as the FM antenna.

## OPERATION INDICATION

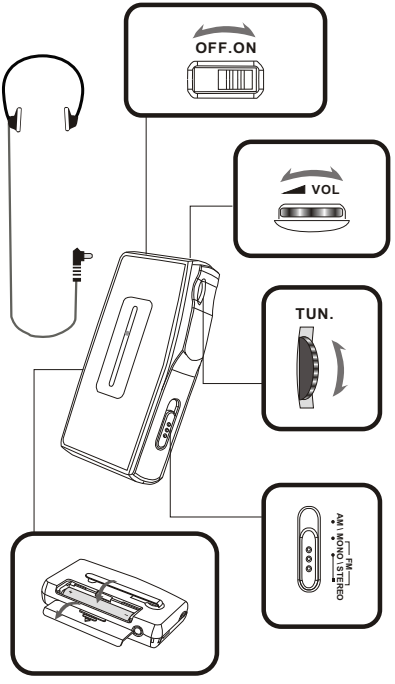




## CAUTIONS

### On Handling

- Avoid exposure to temperature extremes, direct sunlight, moisture, sand, dust or mechanical shock.
- Should anything wrong with the radio, please remove the battery and have the unit checked by qualified personnel before operating it any further.
- In vehicles or in building, radio reception may be difficult or noisy. Try listening near a window.

### Notes On Earphones

- Avoid using earphones at high volume, if you experience a ringing in your ears, reduce volume or discontinue use.
- Shut down the radio before sleeping.
- Do not use earphones while driving or cycling, it can also be potentially dangerous to play your earphones at high volume while walking, especially at pedestrian crossing.

# SPECIFICATIONS

| 1. Frequency Range | |
|---|---|
| FM | 80-108 MHz |
| AM | 530-1600 MHz |

| 2. Noise Limit Sensitivity | | |
|---|---|---|
| FM | ≤ | 20μv |
| AM | ≤ | 2mv/m |

| 3.Power Supply | |
|---|---|
| DC | 1.5 V |
| 1xAAA | Battery |

| 4.Dimensions | |
|---|---|
| Approx. | 45x78x15 mm |